

Sattelwagentreppe

Set: 108 SWS 001

- 60 Stockschrauben
- 60 Madenschrauben
- 60 Knebel

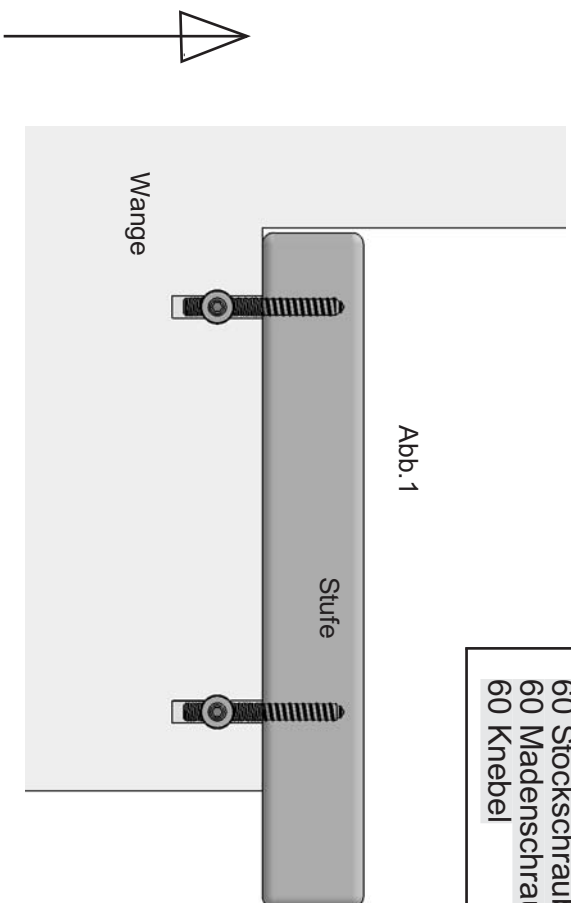


Abb. 1

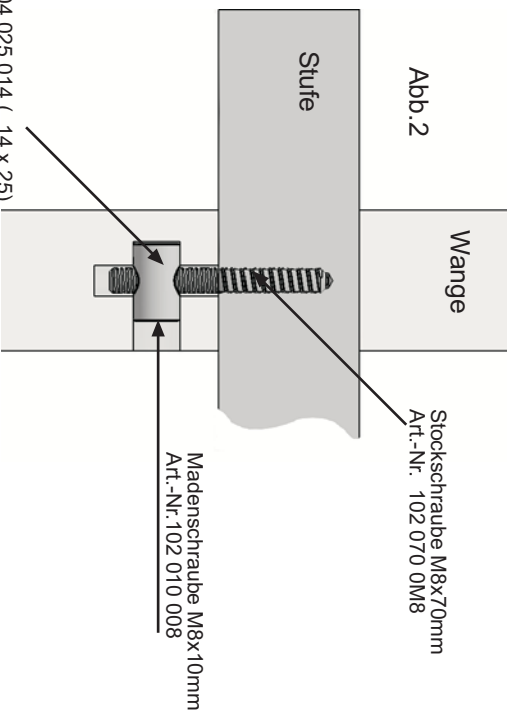


Abb. 2

S3.100

Bohrplan

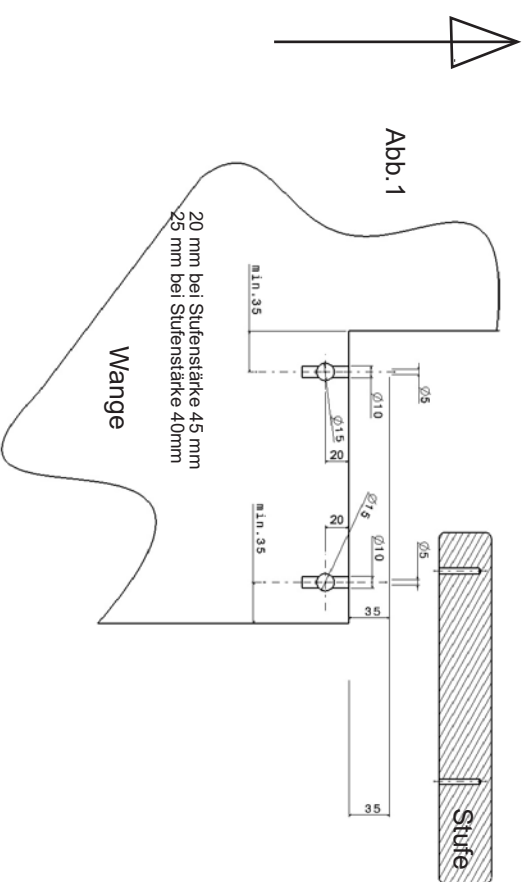



Abb. 1

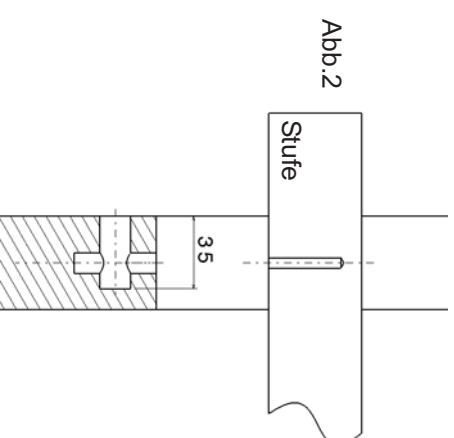


Abb. 2